

The "490-PR" and "490-PD" Operation Guide

(For Maytag PR/PD Machines)

Keys used with 490-PR/PD controller:

Debitkey (coded to your business)
Set-up key

Initial Machine Setup

- The Maytag PR/PD controlled machines have many features to allow the store owner or store managers to set different parameters within the machine. (Prices, cycle times, etc.) The Debitkey "490-PR and 490-PD" controller will grant access to these features with the use of the set-up key. Please see your machine manual for instructions for setting these parameters.

Using the setup key

- Insert the set-up key, the machine will then enter set-up mode. (*You may perform this function without opening the access panel on the machine*)
- To exit set-up mode remove the set-up key from the machine (*Machine is now out of set-up mode*)