



Note 1 : When using the harness to replace an S-series validator, ensure that the QL output line 4 is connected to the S-Series Pin 6 (coin output 6) or Pin 8 (accumulator/credit) depending upon the application.

QL output line 4 has a duplicate operation of either providing a pulse as Coin Output Line 6 or as the accumulator/credit feature.