





COIN MECHANISMS INC.


MAX-II TIMER

TIME AND COIN SETTINGS USING MAXMASK.000
DOC# 09300005 FOR 09270132 & 09290006


COIN SETTINGS

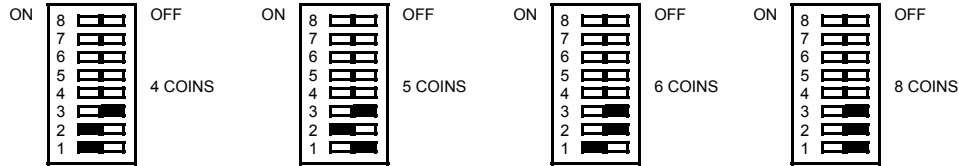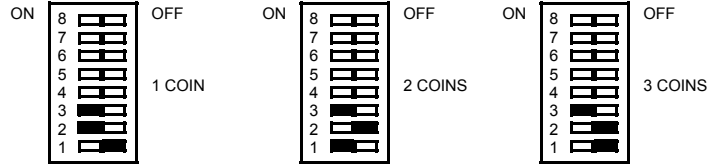


TIME SETTINGS

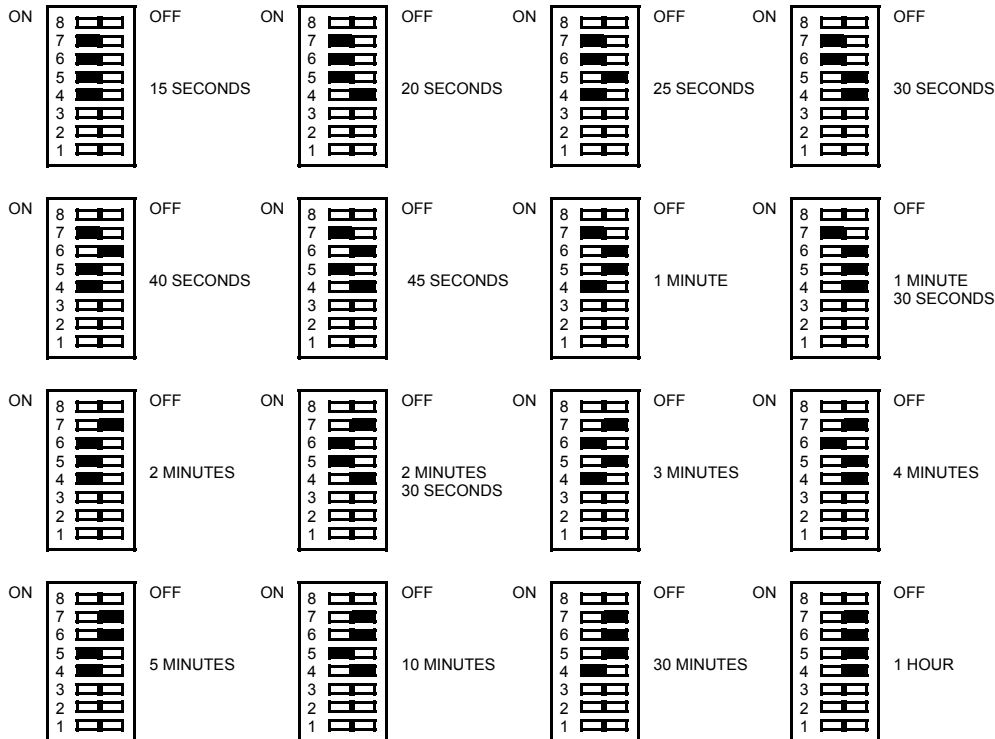

CD-10 SOUND BD

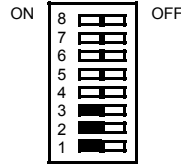


DELAY ON

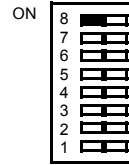

NOTE: When delay switch is in the ON position, there is a 3 to 5 second delay before operation of timer will commence.


EXAMPLES

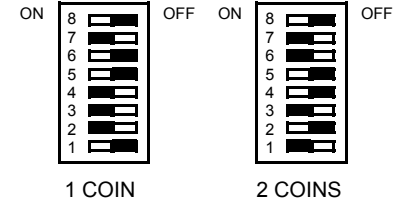

Example of switch settings for a 1 coin vend and a 2 coin vend for 60 seconds

NOTES:

1. Darkened area denotes switch position.
2. Switch positions 1 thru 3 are for coin settings.
3. Switch positions 4 thru 7 are for time settings per coin.
4. Switch position 8 is for choice of a 3 second delay or an immediate start of timer operation. Switch settings "on" and "off" may be represented as "closed" and "open", respectively.

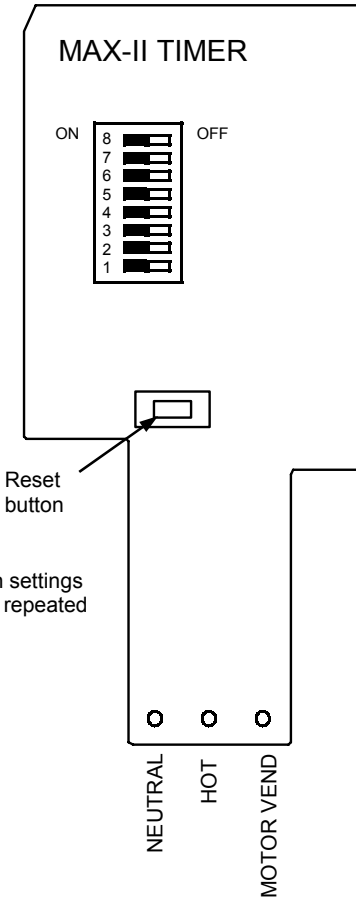

NOTE: Press reset switch settings or previous setting will be repeated